


ALARM

OVER LOAD 2A

RUNNING


SPEED CONTROL

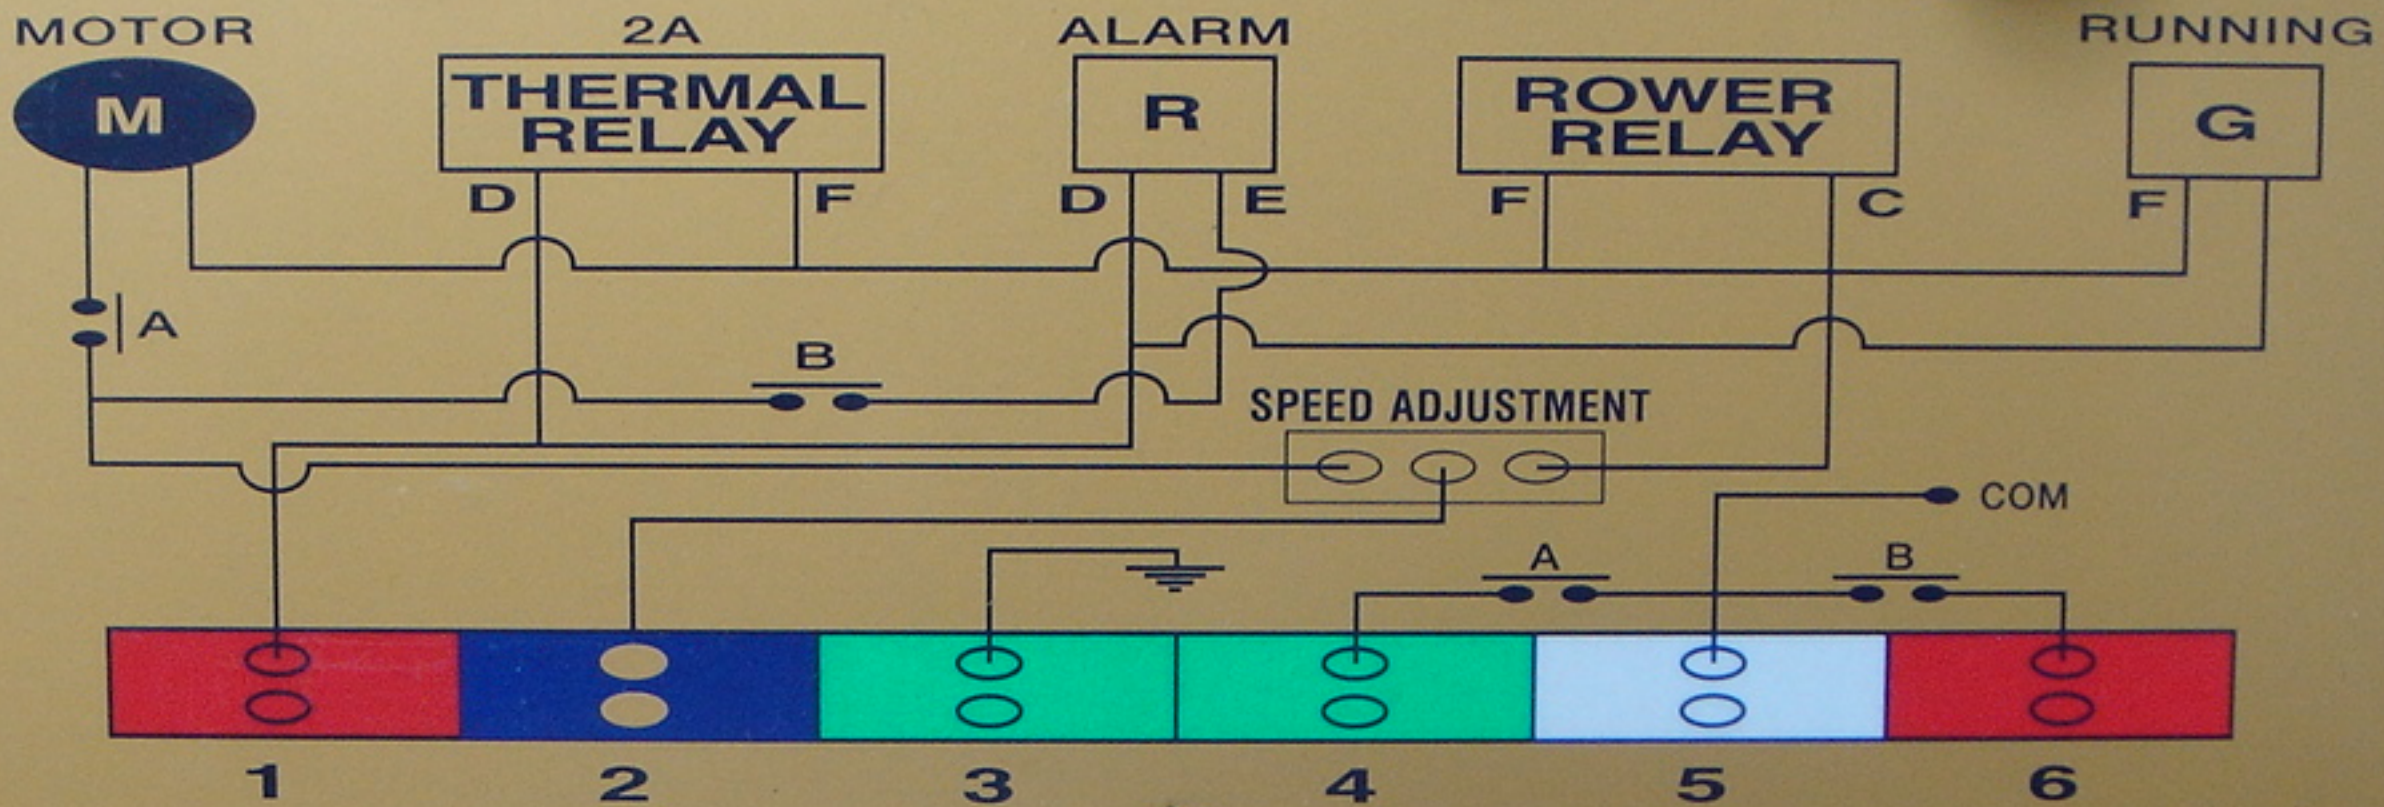

LOAD DISTRIBUTION LINE POSITION:

1,2: 1Ø 220V 50/60Hz
3: GND

4,5: The outside connect the Revolving Lamp,
Non-voltage A connecting point
The outside connect the over load Lamp,
Non-voltage B connecting point

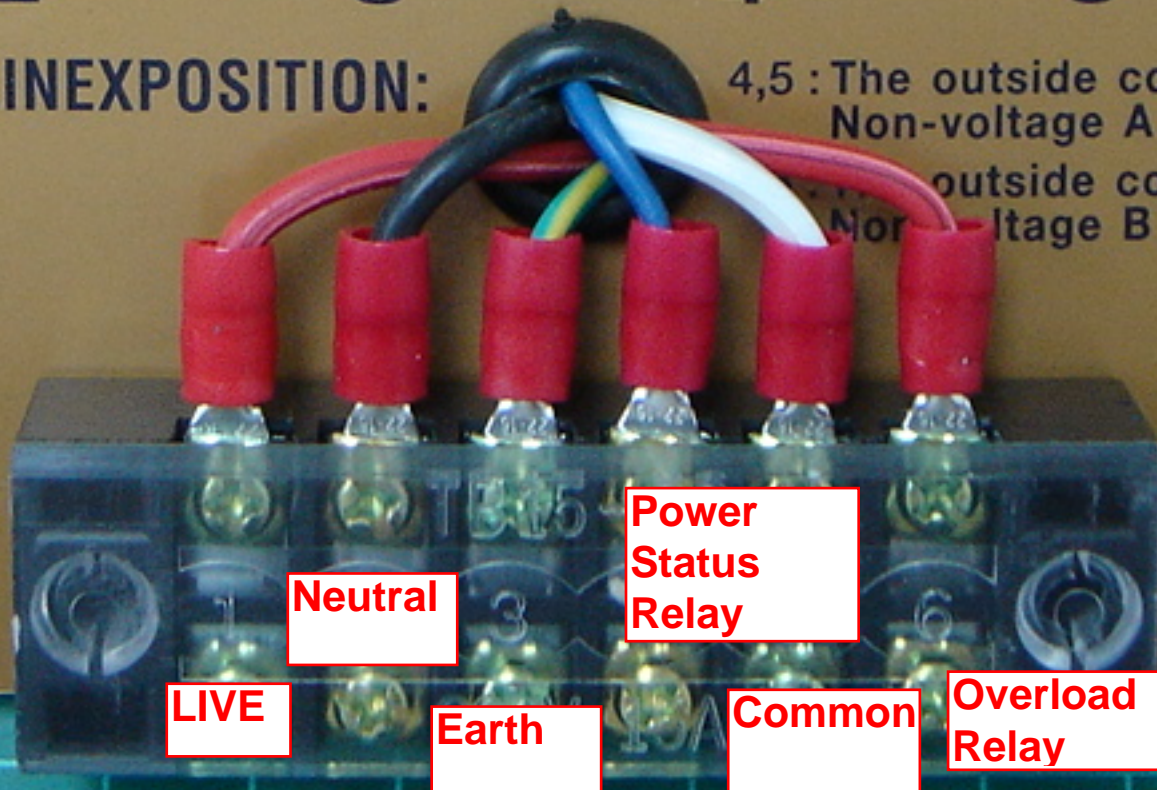

2010 9 1